

# **Installation Manual**


## ALT-ST20-D10

## POCKET DOOR SYSTEM (OVERLAY) SOFT CLOSING

Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

#### ABOUT THE PRODUCT

- This product is hardware for vertical pocket doors in furniture, enabling slow door closing.
- The door is stored inside the cabinet.
- The door incline can be easily adjusted via a 5-stage angle retention mechanism.

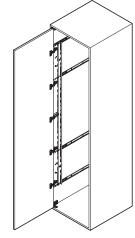

#### **SPECIFICATION**

Туре	S	M	L	LL			
Rail Q'ty	Rail Q'ty 2		4	4			
Door Width		Max. 600 mm					
Door Height	800 - 1200 mm	1200 - 1600 mm	1600 - 2000 mm	2000 - 2400 mm			
Door Thickness	18 - 20 mm						
Door Weight	Max. 9 kg	Max. 15 kg	Max. 20 kg	Max. 20 kg			

Item Name Guide

ALT - ST20 - D10S - 16

Type

Size of rail

#### FOR YOUR SAFETY AND CORRECT INSTALLATION



Caution



Prohibited



Required



### Caution If not followed, injury or damage may result.



- Provide a cabinet that can withstand the weight and impact of opening and closing the door. Be sure to use the specified screws
  and tighten them securely. If the mounting strength is insufficient, the door may fall and cause injury.
- Follow the specified dimensions, specifications, and alignment of the cabinet. Make sure that the cabinet is not warped, since it
  may affect the movement of the door.
- Position the handle so that the hand holding the handle does not strike the side board.
- When moving the cabinet, remove the door and re-assemble it at the site.
- This product is a part for furniture. After installation, check the function and safety of the final product.
- Make sure to check the screws for slack at regular intervals. (one month and six months from first usage and then once every year is recommended).
- Be sure to inform users of the precautions below regarding opening and closing.



Do not force the door to open past 90°. Damage may result.



- · When closing the door, pull it out until the catch clicks and then close it.
- Repeated opening and closing may cause the inner rail to come off, shortening the door movement distance.
   Push the door fully inward or pull it fully out to correct the deviation.



							Overlay (ST20-D10)		
						<b>S</b> Type	<b>М</b> Туре	L Type	LL Type
(1		Rail※ <sup>1</sup>			AL127C 16 - 28 inches	2	3	4	4
(2)	2)	Connecting plate	Connecting plate		ALT-ST20-S ALT-ST20-M ALT-ST20-L ALT-ST20-LL	1	1	1	1
		Con	Adjustment bracket		ALT-ST20-LP	1	1	1	1
(3	3	Concea	aled hinge		SCAF-7G99	2	3	4	5
(2	4)	Hinge r	mounting plate		SBAR3R	2	3	4	5
Œ	5)	Mountii	ng plate		ALT-MP32	2	3	4	5
(6	6)	Dampe	er unit		SD0S8SNG	1	1	1	1
Œ	7)	Dampe	er base		SDARX99	1	1	1	1
(8	8	Door st	topper	Ja S	ALT-ADS	2	3	3	3
(9	9	Protect	or		ALT-ADP	2	2	2	2
(	0	Catch %	<sup>2</sup>		AL127-CH	2	2	3	3
Œ	1	Roller		9	DU19-B4SBR	2	2	2	2
		Roller bracket			ALT-2V-AB	1	1	1	1
12	2)				ALT-2V-BB	1	1	1	1
(1)	3	Insert r	nut	8	SC-107-13	2	2	2	2
(	4)	Slider		Q	G-175	2	2	2	2
(1	5)	ALT-AB- M5 Adjustment bolt			1	2	2	2	
1	6	Bind head tapping screw 3.5×15			22	29	36	36	
	7)	Bind head tapping screw 4×16			6	6	6	6	
	$\rightarrow$	Raised countersunk head tapping screw 3.5×15			4	6	8	10	
(1	9	Hexago	on flange head screv	v M4×6		10	15	20	20
(2	$\rightarrow$	Low countersunk head screw M4×8			2	3	4	5	
(2	(T)	Raised	countersunk head s	crew M4×10		4	6	8	10
(2	2	Countersunk head screw M4×14			1	1	1	1	
(2	3	Hex ke	у			1	1	1	1




 <sup>&</sup>lt;sup>™</sup> Do not cut rails. Rail sizes (inches) include 16, 19, 22, 24, and 28.


 <sup>™</sup> This catch holds the door at the pulled-out position. Be sure to mount it on the uppermost and lower slide rails.
 (For details, see P.4 3).


# **DIMENSIONS: OVERLAY** \*\*Description is for left-handed product.


Rail Size	Door Storing	Cabinet Depth
16	268	Min. 420
19	344	Min. 496
22	420	Min. 572
24	471	Min. 623
28	573	Min. 725

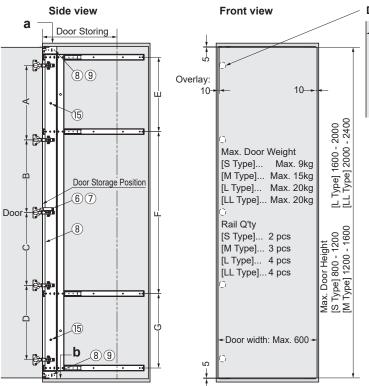

-	Door Processing
_	Backside of door

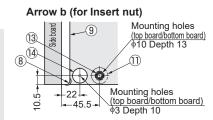


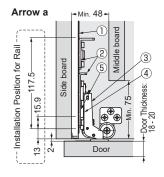

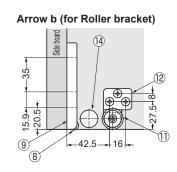


Time	Hinge pitch				Rail pitch		
Type	Α	В	С	D	Е	F	G
S Type	580	-	-	-	680	-	-
М Туре	490	490	-	-	590	490	_
L Type	500	380	500	-	500	480	500
LI Type	450	440	440	450	450	080	450

#### For double doors

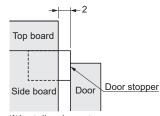

※Install a door stopper so as to create a 2mm gap.


#### Fixed on the side board

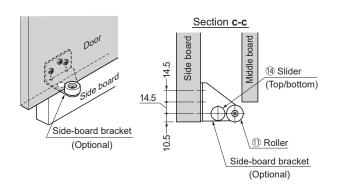

Item Name	Installation Position
ALT - 2V5BR1	For Lower Right and Upper Left
ALT - 2V5BR2	For Upper Right and Lower Left


The applicable door height varies depending on the number of brackets used and the dimensions marked with  $\divideontimes^3$ .

	S	M	L	LL
	Type	Туре	Type	Туре
When both upper	860	1260	1660	2060
and lower side-board	~	~	~	~
bracket are used	1260	1660	2060	2400
When using a side-	830	1230	1630	2030
board bracket on either	~	~	~	~
the top or bottom	1230	1630	2030	2400

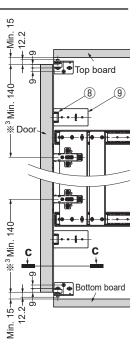




## 1 Mounting the insert nut, roller, and slider

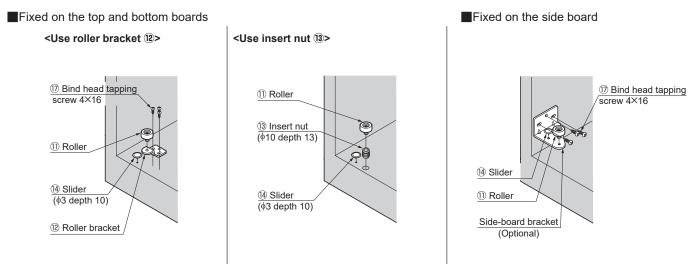


Mount symmetrically on the top board as well.


#### 2 Mounting the concealed hinge, hinge mounting plate, mounting plate, damper base, and damper unit

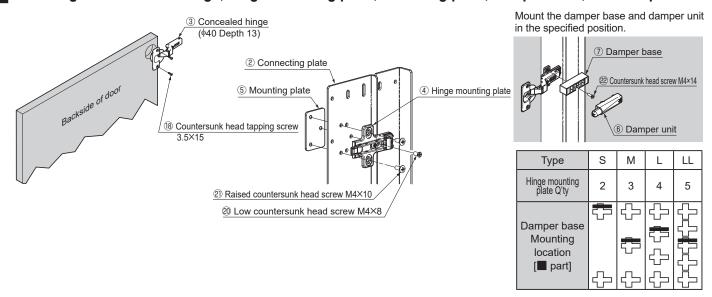


## 3 Temporarily fastening the slide rail and mounting the door stopper and protector

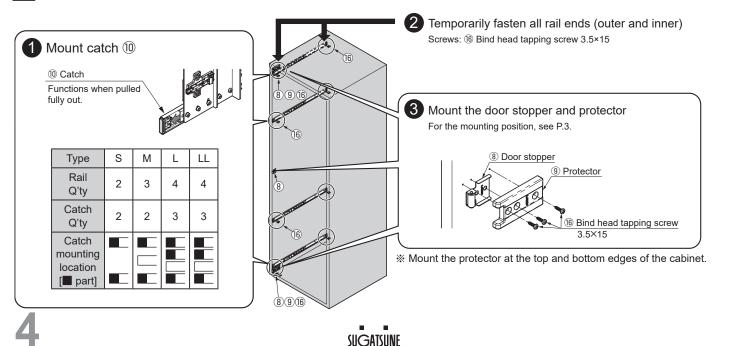


## 4 Temporarily fastening connecting plates

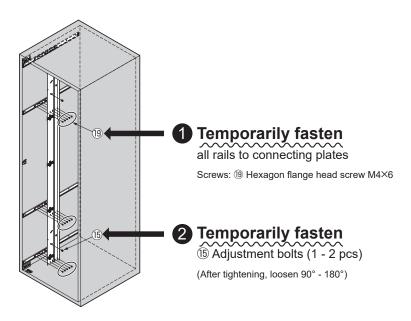

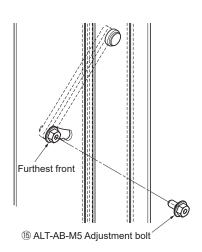


### 5 Rail fixing

- 1 Move the connecting plate from the front to the back, adjusting all the screw positions so that it moves smoothly
- 2 Tighten the Opart (both ends)
- 3 Fasten all the parts (near centre) Screws: ® Bind head tapping screw 3.5×15

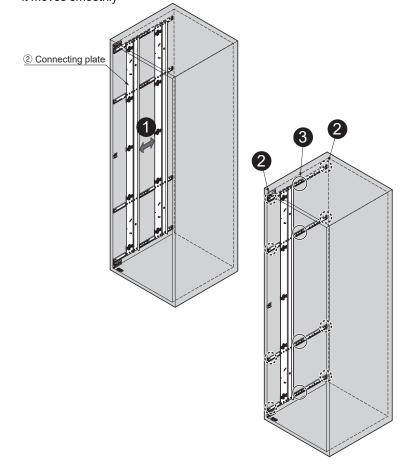

## **6** Hanging door


Push the hinge into the hinge mounting plate

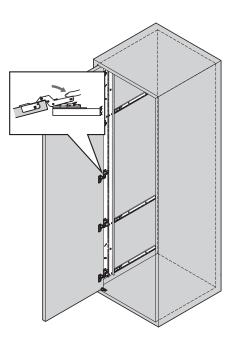


How to remove




## 7 Adjusting the door

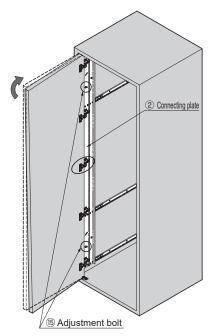


- Check that the screws fixing the connecting plate and the adjustment bolts are loose.
- Adjustment method
- 2 Lift the door and shift the adjustment bolt backward one level at a time, to make the door and connecting plate vertical.
  - 5-stage adjustment is possible in accordance with the door weight.
  - When there are adjustment bolts at top and bottom, align their positions.

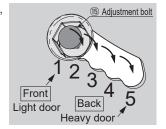


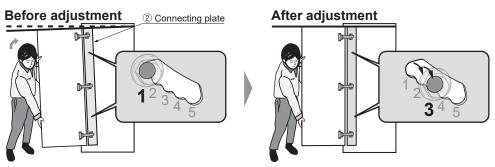


3 Tighten all the temporarily fastened screws.

## 8 Door depth, vertical, horizontal, and closing speed adjustment

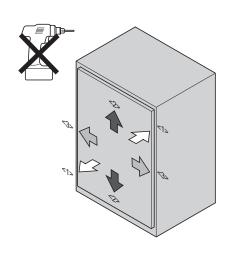

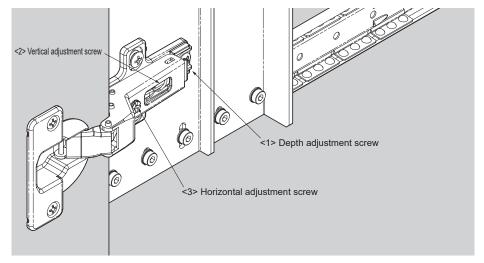

#### Closing speed adjustment (3 stages)

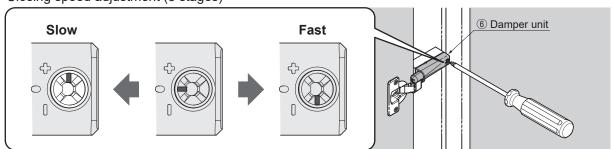

SUGATSUNE KOGYO CO., LTD. Tokyo, JAPAN Phone: +81 3 3866 2260 E-mail:export@sugatsune.co.jp

SUGATSUNE KOGYO (UK) LIMITED Reading, UK Phone: +44 1189 272 955 E-mail:sales@sugatsune.co.uk

SUGATSUNE EUROPE GmbH Düsseldorf, GERMANY Phone: +49 211 53812 900 E-mail:sales@sugatsune.eu

SUGATSUNE AMERICA, INC. California, USA Phone: +1 310 329 6373 E-mail:sales@sugatsune.com Chicago, USA Phone: +1 630 317 7072

E-mail:sales@sugatsune.com

SUGATSUNE CANADA, INC. Montreal, CANADA
Phone: +1 514 312 5267
E-mail:support@sugatsune.ca

SUGATSUNE SHANGHAI CO., LTD. Shanghai, CHINA Phone: +86 21 3632 1858 E-mail:lamp@sugatsune.com.cn Guangzhou, CHINA Phone: +86 20 6639 3554 E-mail:lamp@sugatsune.com.cn

SUGATSUNE KOREA CO., LTD. Incheon, KOREA
Phone: +82 32 220 0603
E-mail:sales@sugatsune-korea.co.kr

SUGATSUNE KOGYO INDIA PRIVATE LIMITED Mumbai, INDIA Phone: +91 9867299597

E-mail:sales@sugatsune.in **Delhi, INDIA** Phone: +91 9867299597 +91 11 45093636